

Alfa Laval CB90DW

Brazed plate heat exchanger

Introduction

Alfa Laval CB brazed plate heat exchangers provide efficient heat transfer with a small footprint.

Double wall plates are used as an extra precaution to avoid intermixing of fluids.

Applications

· HVAC heating and cooling

Benefits

- Compact
- Easy to install
- Self-cleaning
- Low level of service and maintenance is required
- All units are pressure and leak tested
- · Gasket free
- Leak detection
- No fluid contamination

Branded Features



ValuePlus

Total support – with value-adding options to fit your needs

Design

The brazing material seals and holds the plates together at the contact points ensuring optimal heat transfer efficiency and pressure resistance. Using advanced design technologies and extensive verification guarantees the highest performance and longest possible service life.

The double wall construction provides external leak detection and minimizes the risk of mixing the fluids. The thermal performance is similar to single wall heat exchanger.

Examples of connections





External thread

Soldering



Technical data

Standard materials	
Cover plates	Stainless steel
Connections	Stainless steel
Plates	Stainless steel
Brazing filler	Copper

Dimensions and weight

Dimensions and weight ¹	
A measure (mm)	14 + (2.5 * n)
A measure (inches)	0.55 + (0.10 * n)
Weight (kg) ²	3.34 + (0.50 * n)
Weight (lb) ²	7.36 + (1.10 * n)

¹ n = number of plates


² Excluding connections

Standard data	
Volume per channel, litres (gal)	0.173 (0.0457)
Max. particle size, mm (inch)	1.0 (0.039)
Max. flowrate ¹ m ³ /h (gpm)	37 (162.9)
Flow direction	Parallel
Min. number of plates	10
Max. number of plates	120

¹ Water at 5 m/s (16.4 ft/s) (connection velocity)

Dimensional drawing

Measurements in mm (inches)

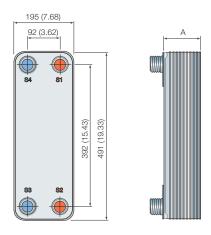

Design pressure and temperature





Designed for full vacuum.

Alfa Laval plate heat exchangers are available with a wide range of pressure vessel approvals. Please contact your Alfa Laval representative for more information.

NOTE: Values above are to be used as an indication. For exact values, please use the drawing generated by the Alfa Laval configurator or contact your local Alfa Laval representative.

This document and its contents are subject to copyrights and other intellectual property rights owned by Alfa Laval Corporate AB. No part of this document may be copied, re-produced or transmitted in any form or by any means, or for any purpose, without Alfa Laval Corporate AB's prior express written permission. Information and services provided in this document are made as a benefit and service to the user, and no representations or warranties are made about the accuracy or suitability of this information and these services for any purpose. All rights are reserved.

200000809-7-EN-GB © Alfa Laval Corporate AB